

Programming and Erasing Remote Controls




NOTE: For openers manufactured between 1995-1997, use the two upper buttons on the remote.


Made after 1997? Use any button for programming.

The current single button remote will program to openers from 1995 to present.

1. Putting Opener Into Programming Mode

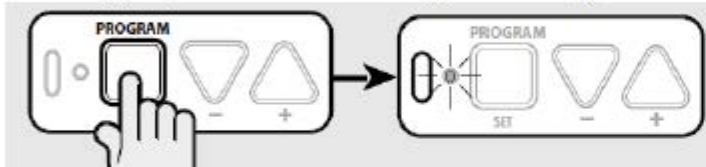



Press and hold the Program Set button until the round LED turns blue. Release.

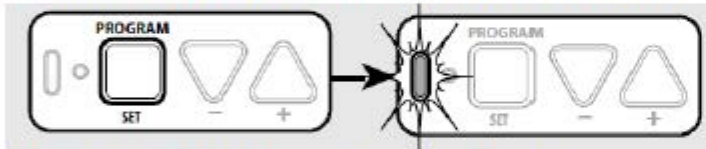

The Long LED then Flashes Purple.
Go to Step 2.

-OR-

Openers and Receivers Manufactured between 1995 to 2011.

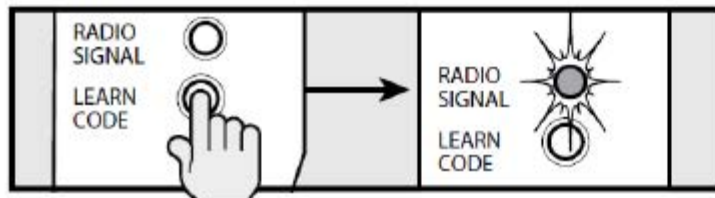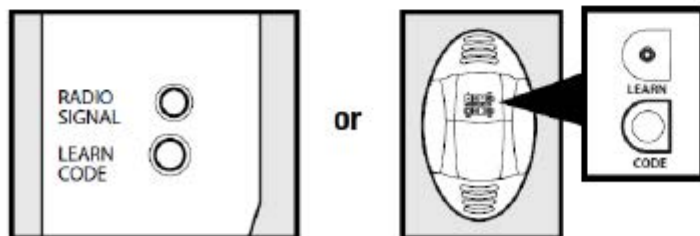


Press and Release the Learn code button once. The red LED will begin to flash.
Go to Step 2.

2. Slowly press and release the remote button twice. The opener LEDs flash and go off, successfully synching. Pressing the button a third time, the door will cycle.

Lost or Stolen Remotes/Erasing All Remotes

- A. Press and hold the program button until the round LED turns blue then release.
- B. Press and hold the up and down buttons at the same time until both LEDs flash blue and turn off.

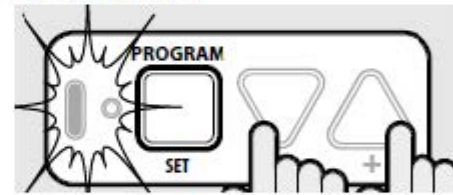

-OR-

Openers and Receivers Manufactured between 1995 and 2011.

- A. Press and hold the learn code button until the LED stops blinking.

